

## Drip Shield Installation

### Tools required:


Reasonably sharp scissors.

Soap

Water

Scrub brush

1. Thoroughly clean fabric where drip shields will be secured. If that means soap and stiff bristled brush to remove all mold, mildew and loose dirt etc., then do so.
2. Remove any old Velcro and thread, you want the shields to have flat, clean fabric to adhere to.
3. Let dry completely.
4. Hold drip shield up to determine the best location. This is the time to trim to desired size should it be needed before paper is peeled off the adhesive.
5. Once you are sure about the location and position. Peel and stick drip shields in place. Drip shields should not be lifted and stuck over and over. This will weaken the adhesive. Get it right the first time.
6. Press fabric and adhesive together, using strong finger pressure to make a secure bond.
7. Allow adhesive to set 24 hours before exposure to excessive wind, or water. This is an aggressive adhesive. The bond strengthens and sets.

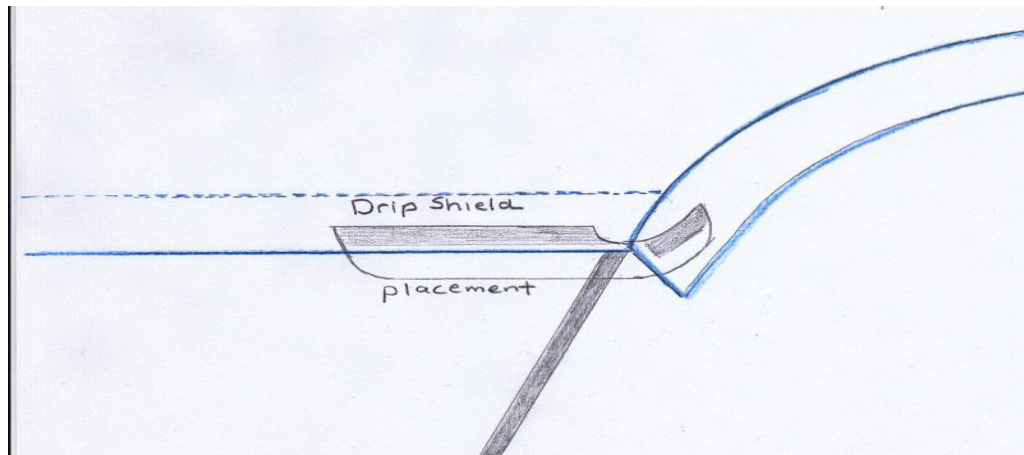

Thanks for purchasing EZ-Xtend Drip Shields.

Please let us know your experiences at: [tamarama9@charter.net](mailto:tamarama9@charter.net)

We would love to see your photos!

[www.ez-xtendboatzippers.com](http://www.ez-xtendboatzippers.com)

770-271-9093